

PROTECRSS PRE-CUT CRICKET

1/2" (4%) Cricket Series


ModulR TS Insulation Technology



Membrane-ready
No overlay boards required





Our pre-cut cricket series can handle any size cricket. With only 2 Starter Packs you can assemble a cricket 22'-9" or shorter.

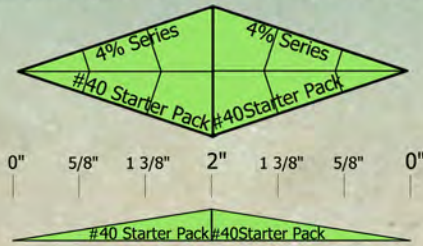

Panels tapered down to 0"
No on-site modifications required at edge

With as little as 5 different types of product Packs or Panels, you can assemble crickets of 100' or greater.

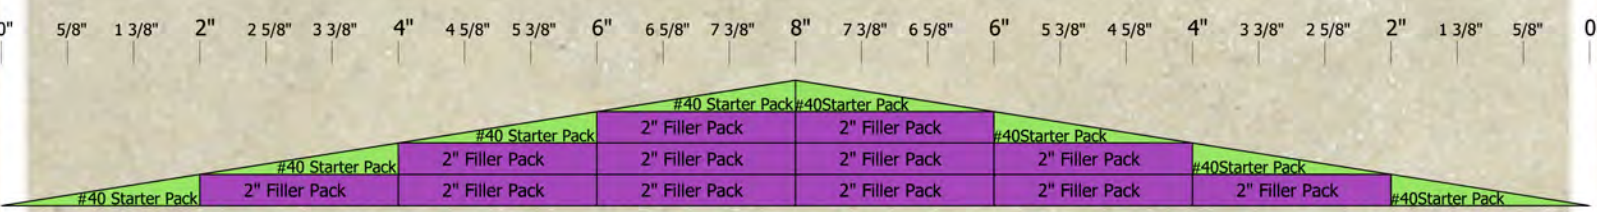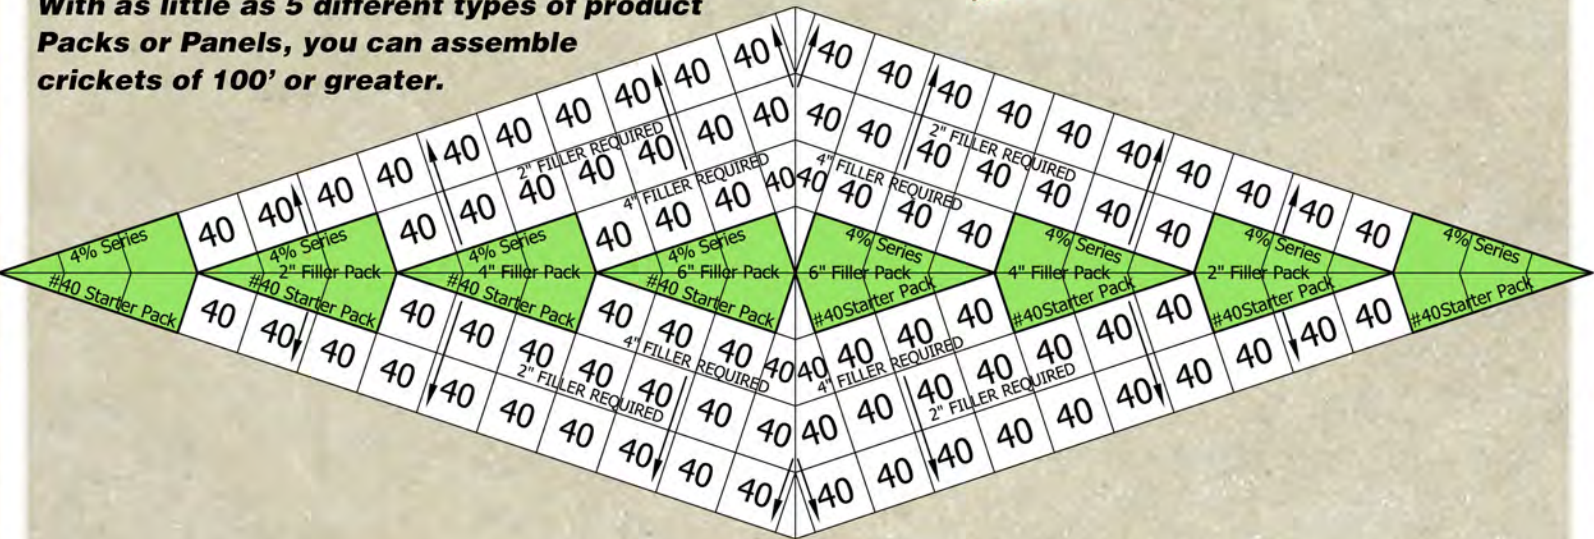

ModulR TS INC

Developing roofing solutions with everyone in mind

1-800-908-9899 / www.modulrts.com / contact.us@modulrts.com

• **Fire resistant** • **Inorganic**

• **Dimensionally stable** • **Sustainable**

ModulR is pleased to bring you our full line of pre-cut crickets, engineered for ease and speed of installation of diamond shaped crickets (3:1 length to width ratio). Each #40 Starter Pack contains 6 pre-cut tapered (0" to 2") stone wool panels. The 2" Starter Pack Filler contains 5 pre-cut 2" stone wool panels.


To achieve optimal performance, it is recommended to install a cricket slope double that of the structural slope. I.e.: a ProtecRSS pre-cut 1/2" (4%) cricket series is suggested for a structural slope of 1/4" (2%).

ModulR TS Pre-Cut 1/2" (4%) Cricket Series quantity chart


* Length	Pre-cut 0" to 2" #40 Starter Pack	4' x 4' #40 Panel 0" to 2"	Pre-cut 2" Stone Wool Starter Pack Filler	4' x 4' 2" Stone Wool Filler
Up to 22'-9"	2			
Up to 25'-4"	2	4		
Up to 45'-6"	4	12	2	
Up to 48'-1"	4	16	2	
Up to 50'-7"	4	20	2	4
Up to 68'-4"	6	36	4	12
Up to 70'-10"	6	40	4	12
Up to 73'-4"	6	44	4	16
Up to 75'-11"	6	48	4	24
Up to 91'-1"	8	72	6	48
Up to 93'-7"	8	76	6	48
Up to 96'-2"	8	80	6	52
Up to 98'-8"	8	84	6	60
Up to 101'-2"	8	88	6	72

* This series can accommodate crickets greater than 101' - 2". Please contact us for details.
Custom crickets and available on demand.

Pre-cut
0" to 2"#40
Starter Pack

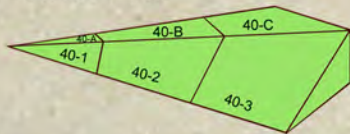

Pre-cut
2" Stone Wool
Starter Pack Filler

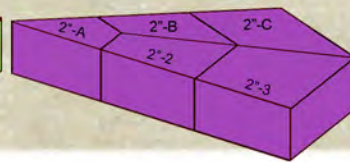

ModulRTS INC

Developing roofing solutions with everyone in mind


1-800-908-9899 / www.modulrts.com / contact.us@modulrts.com

PROTECRSS PRE-CUT CRICKET

1/2" (4%) Cricket Series

5 Easy Steps

Pre-cut Cricket Installation Instructions


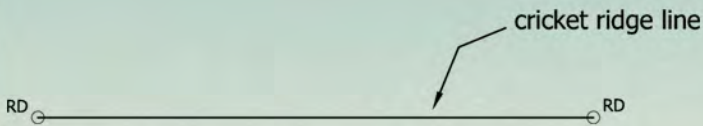


Step 1: Cricket Ridge Line

Establish the Cricket Ridge Line by snapping a chalk line between both drains.

Step 2: Cricket Mid-point Line

Establish the mid-point of Ridge Line. Snap a chalk line perpendicular to Cricket Ridge Line. Cricket Mid-point Line should be divided at equal distance on either side of Ridge Line.

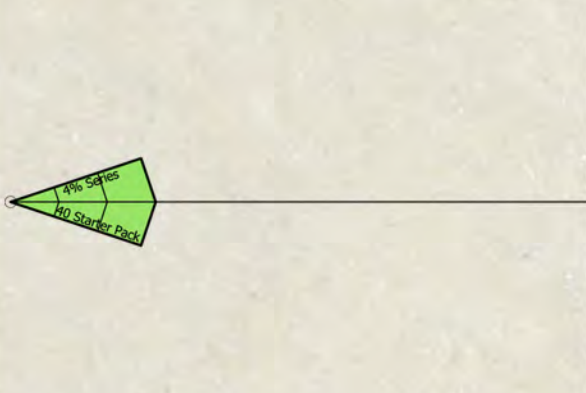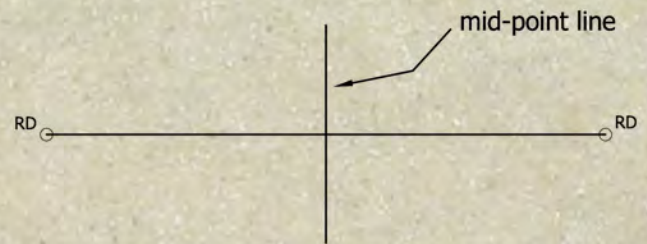

Step 3:

Lay down first #40 Starter Pack starting at drain and centered on ridge line.

Please note, with smaller crickets, if mid point line is reached in step 3, trim excess at mid point line and proceed to other half of cricket. For all other larger crickets proceed to step 4.

ModulRTS^{INC}

Developing roofing solutions with everyone in mind

1-800-908-9899 / www.modulrts.com / contact.us@modulrts.com

PROTECRSS PRE-CUT CRICKET

1/2" (4%) Cricket Series

5 Easy Steps


Pre-cut Cricket Installation Instructions

Step 4:

A – Following #40 Starter Pack from previous step, continue with 2" Starter Pack Filler along ridge line up to Mid-point Line and trim excess.

B – Along outside edge of 2" Starter Pack Filler, lay down 2" Fillers (4' x 4') followed by second row of 2" Fillers (4' X4') up to Mid-point and trim excess along line.

C – Following 2" Starter Pack Filler and 2" Filler (4' x 4'), lay down #40 Tapered Panels and trim excess along Mid-point Line.

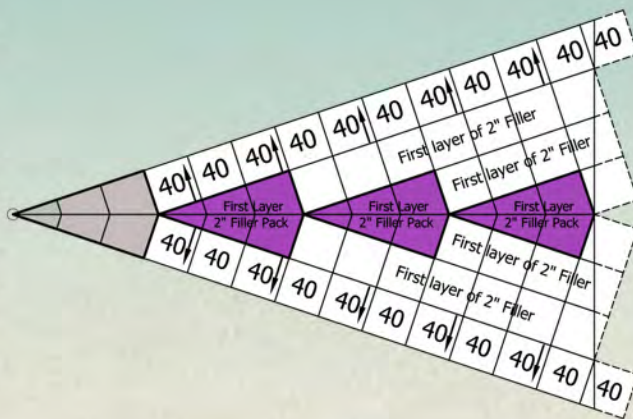

Step 5:

A – Over 2" Starter Pack Filler, lay down #40 Starter Pack.


B – Following #40 Starter Pack, continue with 2" Starter Pack Filler over previous layer of 2" Starter Pack Filler up to Mid-point and trim excess at line.

C – Along outside edge of 2" Starter Pack Filler, lay down 2" Fillers (4' x 4') up to Mid-point and trim excess along line.

D – Following 2" Starter Pack Filler and 2" Filler (4' x 4'), lay down #40 Tapered Panels and trim excess along Mid-point Line.

E – Repeat steps 5A - 5D until first half of cricket is complete.

F – Repeat steps 3 - 5 for other half of cricket.

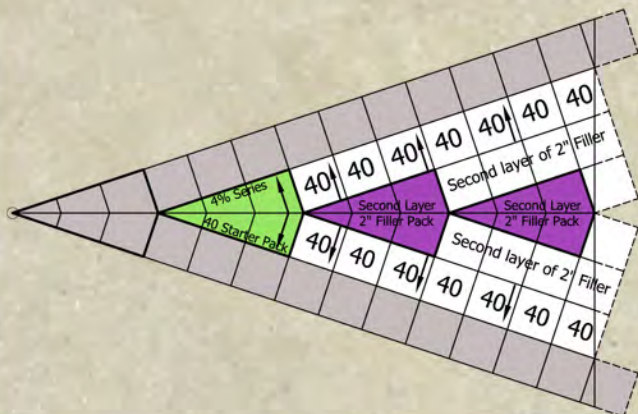

ModulRTS^{INC}

Developing roofing solutions with everyone in mind

1-800-908-9899 / www.modulrts.com / contact.us@modulrts.com